## MAC/CUPS Driver for Performance, H-8308p & Workstation PCL Series

## USB Installation Instructions

The purpose of this document is to provide instructions on how to install the MAC/CUPS driver for Datamax-O'Neil Performance, H-8308p and Workstation PCL printers via USB connection.

The instructions shown in this document is for a MAC OS installation. Please follow the appropriate steps as prompted from Gutenprint driver and your version of Linux when installing.

The driver is part of the Gutenprint driver suite 5.2.11 and higher. The MAC/CUPS driver package is located under Support & Downloads > Downloads & Drivers > Performance Series on the Datamax-O'Neil website.

1. Double click on the Gutenprint 5.2.11-pre1.dmg file, and the window below will open. Press the "Continue" button.



2. A pop up window will appear. Press "Agree" button to install the driver.



3. After pressing the "Continue" button you will see the screen below. Press the "Install" button.





right by our customers.

4. After pressing the "Install" button, the driver wizard will ask you to enter your system password to finish the installation.



5. The window below will display once the driver has been properly installed on your MAC OS.



6. Once the driver package has been installed, you will need to go to the Printers & Scanners' section under System Preferences. On the lower left section of the window, click on the "+" symbol and select "Add Printer or Scanner..." from the pull-down menu to set up the Datamax-O'Neil driver.



7. After clicking "Add Printer or Scanner," the MAC system will auto-detect the USB connection to the Performance Series printer(s).

**NOTE**: The printer may feed a blank label initially. If this is the case, the MAC system has defaulted to Generic Post Script, which the printer does not use.

				Add
	Drinters & Company		😫 🌚 🚔	Q Search
			Default IP Windows	Search
			Name	∧ Kind
				USB
	No printers are available			
	Click Add (+) to set up a printer.			
			Name: DatamaxOneil_w1110	
			Location: Datamax-O'Neil's iMac	
+ -			Use: Auto Select	<b>C</b>
	Default printer: Last Printer Used		Sending data to printer.	
	Default paper size: US Letter 0	V		Add
		NIR AL		

8. Next, click on "Select Software..." and choose the Datamax-O'Neil driver.

			Add
	Printers & Company	_	Q Search
		Default IP Windows	Search
		Name	<ul> <li>Kind</li> </ul>
		DatamaxOneil_ w1110	USB
	No printere are available		
	Click Add (+) to set up a printer.		
		Name: DatamaxOneil w111	10
		Location Auto Select	
+ -		Use ✓ Generic PostScript	Printer
		Select Software	
	Default printer: Last Printer Used	Other	
	Default paper size: US Letter 🗘 🤇		Add

9. After choosing "Select Software," scroll down until you see the following printer listed, or, alternatively, you can type "Datamax" and the driver should display. Select the correct printer and click "OK."

				Add	
				Add	
		000	Printer Software		Q Search
	Printers & Scanners C				Search
		1	Q datamax	•	o da on
		Datamax-ONeil	PCL Label Printer - CUPS+Gutenprint v	5.2.11-pre1	
					<ul> <li>Kind</li> </ul>
					USB
	No printers are available.				
	Click Add (+) to set up a printer.				
			Cancel	ОК	
T -			Use: Select Softwa	are	\$
	Default printer: Last Printer Llead	^			
	Delauit printer: Last Printer Used	v			
	Default paper size: US Letter	≎ ?			Add
	ALCONTRACTOR AND		THE REPORT OF A DESCRIPTION OF A DESCRIP	St 19 ANDREAD	

10. Once the driver software is installed, select the "Printer" tab at the top of the screen, and click on "Print Test Page" to print a test page.

CatamaxOneil_w111	0 Edit	Printer Jobs Window	Help						
		Pause							
		Make Default Settings Supply Levels Print Test Page Network Diagnostics Error Log	#D #S						
5		Printers & Scanners Pre	ferences #L Printers & Scar	ners	Q Search	Pause Set		DatamaxOneil_ w1110	South Transfer & Labore
	Printer	s DatamaxOneil_ w1110 • Idle, Last Used		DatamaxOneil_ w Open Print Que Options & Supp	1110 ue	Paulo de	un ya		
			Location:	Datamax-O'Neil's iMa	ic				
			Kind: Datamax-ON	il PCL Label Printer -	CUPS+Gutenprint v5.2				
	+ -		Status:	ldle er on the network	Sharing Preferences			1	
			Default printer: Default paper size:	Last Printer Used	•	?			